

Click to prove
you're human



1. Open the door.2. Remove battery cover.3. Press the program button once.4. Enter new user code.5. Press lock button.6. If programming is successful the keypad will flash green once, and you will hear one beep. Is your doors smart lock not accepting any more user codes? Does someone unwanted know the code to your keyless lock?Whatever the reason, you will eventually find the need to delete or change your locks code. But the question is, how do I delete the code on my Kwikset lock?Well, you can easily remove one or all the user codes from your Kwikset SmartCode by accessing and pressing the program button at the doors interior or through your locks keypad. Guide to Delete the Code on Kwikset LockGetting rid of the locks old code for safety or convenience reasons is a staple in the keyless and keypad locking industry. And fortunately, there are different and easy options to do that whether you want to remove all the user codes or just a specific code.1. Deleting all Kwikset lock codesIf you recently just moved to a house or an apartment that is secured with a Kwikset door SmartLock, then it is important to delete all codes of the lock.Regardless of the situation, the main reason you need to do this is to ensure that no unwanted person can easily sneak into your house through the lock codes.System resetPerforming a system reset to override and delete all the programmed user codes is one effective and easy way to keep your security intact.It is advisable to do this measure when you presume that someone knows your door lock code. This measure is also ideal for Kwikset SmartCode 913 troubleshooting if your lock is experiencing technology vulnerability.Go to the interior side of the lock and unfasten the mounted screws to remove the locks cover.At the inside of the lock, using the Kwikset smart code manual, locate the A button and press it ten times.To confirm the action; locate, press, and release the program button. It must be done within ten seconds after releasing the last A button press.Note that resetting your locks system would only work if you have a WiFi-enabled Halo Keypad SmartLock, WiFi-enabled Halo Touchscreen SmartLock, or 919 Premis Contemporary SmartLock.Proceed to the next option if your Kwikset lock model is not on the list.Factory setting restorationThis safety measure helps you restore the default setting of your lock.Moreover, resetting your lock into default is the simplest way to remove all the configurations, programmed codes, and connected network systems. Meaning, doing this will also have your master code deleted.At the interior side of the lock, unfasten the mounted screws and remove the cover of the back panel.Power off the lock by removing the battery pack from the battery compartment.Using your user manual, locate the program button.Press and hold it for around thirty seconds while reinserting the battery pack into the compartment.Release the program button once the lock confirms the action. The confirmation differs from model to model, but typically, a beep and red-flashing light confirm the action.Verify the reset completion by pressing the reset button. Use the user manual for the guide.Keep in mind to reprogram your master code and change Kwikset lock code right after you restore the factory setting of your lock.Moreover, this method would also come in handy for Kwikset 913 installation or even for all the Kwikset models troubleshooting.2. Deleting specific Kwikset lock codesJust like removing all the registered user codes on your lock, it is also advisable to get rid of some or specific lock codes from time to time.It is ideal to delete forgotten codes to free up slots for other codes you will need in the future. Removing guest codes and contractor codes also ensures that you are free from any type of vulgar entries.Sounds great, right? Thankfully, deleting user locks individually is also straightforward to the point wherein you can do it by yourself and of course, with the help of your locks manual.You can remove user codes by either accessing the program button at the locks back panel or by inputting your Kwikset programming code on the keypad.Kwikset SmartCode 909 code deletion.If you wish to delete the user code, you might want to do a system or factory reset to your SmartCode 909. That is because you cannot delete lock codes for this model, but you can change them.So if you only want to override the previous code for safety or convenience purposes, then you can just add a different user code on the lock position you wish to get rid of.Kwikset SmartCode 955/917 code deletion.Fortunately, users are allowed to delete and add access codes for Kwikset SmartCode models 955 and 917.To make it even better, users can still delete their codes even without enabling their locks master code. Follow these mini steps to do it.Open the inside of the locks back panel.Using the program key or a paperclip, press and release the program button.Wait until you hear the beeping sound to continue.Press key #2 to command deletion. Again, wait until short beep chimes and a green light flashes.Input the user code you wish to remove and then press the Kwikset button.Repeat the last step and see if the keypad flashes green. If it does, then you've successfully deleted the user code.For SmartCode 917 add code guide, you can refer to your user manual for more detailed steps.Kwikset SmartCode 913/888 code deletionDeleting a programmed access code on your Kwikset lock 888 and SmartCode 913 is almost the same as how you delete a user code for SmartCode models 955 and 917.The only difference is you dont need to press any numbered key to command the deletion. Just press the lock button after you step the program key.Use the Kwikset 913 manual if a problem arises.FAQsDoes the Kwikset code deletion process the same for Schlage locks? Although Kwikset and Schlage locks are two innovative, keyless keypad lock brands, you still cannot use your guide to delete your Schlage door lock code.If you wish to delete code Schlage lock, it is best to look for a brand-specific guide to avoid future problems.ConclusionAlmost all keyless lock users face the how do I delete the code on my Kwikset lock? type of situation. Hopefully, this guide teaches how you can remove all or certain user codes on this model-specific Kwikset Lock.Always note the importance of refreshing your code annually to ensure your and your family's utmost convenience and security. If experiencing something more complicated than removing user codes, it is best to consult customer support to aid your situation.Learn more other related tips & tricks:Opening a Kwikset Lock With a Dead Battery A Comprehensive Guide.I am the last member to join Revolar and might be just the luckiest to work with dedicated people like Teddy and John. Our team has established a process where my only job is writing the best content to deliver incredible ideas and guides. Finding the manual for your Kwikset lock may seem as difficult as hunting for a needle in a haystack, but don't worry! All the details you need, from master codes to user instructions, are right at your fingertips if you know the right places to search. Once you've got that manual in your hands, it's like discovering a treasure. In this article, I walk through programming, changing, and resetting the codes for various Kwikset smart locks, including Obsidian, Premis, Powerbolt 2, Kevo, SmartCode 914, 275 Touchscreen Electronic Deadbolt, SmartCode 888, and SmartCode 910. If all else fails when you try to change your smart locks codes, you can always carry out a factory reset. Check out my guide to that here. To add new user codes to your Powerbolt 2, ensure the lock is unlocked and the door is open. Enter your master code (default is 0-0-0-0 for new installations), then press the lock button to hear a single beep. Press 1, then the lock button again, followed by entering a new 4-10 digit user code. Lastly, press the lock button once more. Two beeps signal success, while three beeps indicate failure, necessitating repetition of the process. Test the newly added user code by locking the door with it open, entering the code, and pressing lock to see if the door unlocks. Lock Button on the PowerBolt 2 To delete all user codes from your Powerbolt 2 smart lock, first, ensure the lock is unlocked and the door is open. Enter your existing master code (default is 0-0-0-0 for new installations), then press the lock button to hear a single beep. Next, press 5 and then the lock button once more. If successful, you'll hear two beeps (three beeps indicate failure and require repeating these steps). This will delete all user codes, and your lock will need a new user code before it can be operated without a key. To get started with Kevo, download the Kevo app at kwikset.com/kevo/app or scan the QR code provided. After installing the app, follow the step-by-step instructions to create an account, enroll your first smartphone, and send eKeys to your family and friends. Understanding the difference between an Admin user and other users in the system is important when sending eKeys with Kevo. An Admin user has the authority to send, disable, and delete eKeys, providing more control over access. Kevo App QR Code Kevo Plus offers an upgraded experience, allowing you to lock and unlock your home remotely and check the status of your door. To use Kevo from your phone, ensure that Bluetooth is enabled, and the Kevo app is running in the background. Keep in mind that a clear line of sight between the lock and the phone is necessary for proper functionality. To lock and unlock the door, simply press the deadbolt rose. For added security, Kevo also offers an optional passcode feature within the app that requires a 4-digit PIN whenever accessing the app, safeguarding your Kevo account against unauthorized changes when your phone is unlocked. The Kwikset SmartCode 914 lock allows you to add and delete user codes through your smart home control system, making it convenient to manage access to your home. However, if your system doesn't support this functionality, you can still add codes directly to the lock. Keep in mind that during the programming process, if you don't press any buttons for five seconds, the system will time out, and you'll have to start over. For better security, consider using a mastercode when adding or deleting user codes. To program a user code Ensure the door is open, and then press the Program button once. Enter the desired user code, which should be a unique code consisting of 4-8 digits depending on your smart home system. Up to 30 user codes can be programmed in total. After entering the user code, press the Lock button once. If programming was successful, the lock will produce one green flash followed by one beep. If unsuccessful, the lock will emit three red flashes and three beeps. In this case, ensure you don't pause for more than five seconds during programming, the user code isn't a duplicate, and it's between 4-8 digits. Additionally, verify that the lock has storage for an extra code; if not, remove an existing code to make space for the new one. Note that the beeping sound will only be audible if switch #3 on the lock's interior is in the on position. Adding user codes is a straightforward process. With the lock unlocked and door open, input your programming code and press the lock button to hear one beep. Press 1 and then the lock button again to hear another beep. Enter a new user code between 4 and 10 digits long and press the lock button once more. Two beeps indicate a successful entry. Test the new code by locking the door while it's open, entering the new user code, and pressing the lock symbol the door should unlock. To delete all user codes on a Kwikset 275 Touchscreen Electronic Deadbolt, first, ensure the lock is unlocked and the door is open. Input your programming code (the default for a new installation is 0-0-0-0) and press the lock button. After hearing one beep, press 3, then the lock button again. You should hear two beeps, indicating success. For a new installation, this deletes the default user code (1-2-3-4), and for subsequent instances, it removes all user codes. Until new user codes are added, the lock can only be operated using the key and turn piece. The SmartCode 888 allows you to add up to 30 unique user codes, which provide keyless access to your home. Although it is recommended to manage these codes through your smart home system, they can also be programmed directly on the lock itself. To do this, ensure the door is open, press the Program button once, then enter a unique user code between 4 and 8 digits, depending on your smart home system. Press the Lock button once to complete the process. If successful, the lock will beep once and the Lock button will flash green. If unsuccessful, the Lock button will flash red three times with three beeps, indicating you need to try again without pausing for more than 5 seconds and ensuring the code is not a duplicate. Delete User To delete a single user code from the SmartCode 888, you can follow these steps. First, press the Program button once, then press the Lock button once. Next, enter the user code you wish to delete, press the Lock button, and then re-enter the same user code. Press the Lock button one final time to complete the process. If you've done this correctly, the code should be deleted. To confirm the deletion, test the user code while the door is open to ensure it no longer unlocks the door. If it continues to unlock the door, make sure to enter the same valid code in both steps 3 and 5, then try again. The SmartCode 910 is designed to work seamlessly with your smart home control system, making it easy to add and delete user codes as needed. If your smart home system doesn't provide this functionality, you can still manage user codes directly on the lock. Begin with the door open and press the Program button according to the position of the user code you wish to program. Then, enter the desired user code, which must be unique and 4 to 8 digits long. Finally, press the Lock button once. A successful programming will be indicated by a single green flash and beep, whereas three red flashes and beeps signal an unsuccessful attempt due to the code being a duplicate or incorrect digit length. In case the programming times out after five seconds with three beeps, simply restart the process without pausing for too long between steps. Enhance your lock's security by using a mastercode to manage user codes. To delete a user code, just replace it with a new code in the same position. For instance, if you want to remove the third code, add a different code in the third position. Test the original user code to ensure the lock no longer recognizes it. If you're not sure of a user code's position and wish to delete all lock-associated codes, perform a factory reset. This way, you can regain full control of your Kwikset Smart Lock and enjoy secure, streamlined access management. Obsidian Kwikset smart locks are designed for ease of use and enhanced security. While it is highly recommended that you add and delete user codes through your smart home control system, these actions can also be performed directly on the lock. With the ability to store up to 30 unique user codes, you can easily grant access to family members and trusted guests. When programming your Kwikset Obsidian smart lock, it's important to be aware of the programming timeout feature. If the screen is not touched for 20 seconds during the process, the system will automatically time out, as indicated by three beeps and the X pattern flashing three times. In such a scenario, you'll need to restart the procedure. To ensure optimal security, a mastercode can be utilized when adding and deleting user codes. Remember to keep the door open during programming, and make sure that the user code being added is unique and falls within the 4-8 digit guidelines established by your smart home system. The Premis app serves as a convenient way to manage and control your Kwikset Smart Lock. To begin using it, download the app from the App Store and install it on your smartphone. With this app, you'll have access to various features that enhance your lock's functionality and offer you the ability to manage its settings accordingly. Once the Premis app is installed, follow the in-app instructions to easily pair your smartphone with the lock. This setup process is user-friendly and will quickly enable you to control your lock through your phone. After successfully pairing, you can start utilizing the app to manage settings, such as creating and sharing user codes with family and friends. This feature allows you to give others access to your home while maintaining the security a Kwikset Smart Lock provides. This comprehensive guide has walked you through the steps to program, change, and reset codes on various Kwikset models, including Obsidian, Premis, Powerbolt 2, Kevo, SmartCode 914, 275 Touchscreen Electronic Deadbolt, SmartCode 888, and SmartCode 910. By following these straightforward instructions, you can set up and manage who gets access to your home and maintain control over your security. Remember to keep your door open during programming and use unique user codes to ensure optimal security. Embrace the convenience of Kwikset smart locks and upgrade your home security today. smartlocks.pdf 514].pdf Note: Do not use prints from this website to mark distances. Due to individual printers, dimensions on installation instructions may not print at an accurate scale. 1 MB 13 MB 13.5 MB 1.9 MB Enabling and Setting the MastercodeProgramming timeout: If no button is pressed for five seconds, the system will time out and you will need to restart the procedure.1. Keep door open. Press and HOLD the Program button until the keypad flashes green (about 5 seconds).2. Enter new Mastercode.3. Press Lock button once.4. Re-enter Mastercode.5. Press Lock button once.If programming is unsuccessful, the keypad will flash red three times with three beeps. Make sure the Mastercode has not already been programmed. Attempt the procedure again, making sure to enter the same new Mastercode in step 2 and 4.6. Make sure switch #3 is on, and press the Program button once. If you hear three beeps andNote: The lock will time out after five seconds.Disabling and Deleting the Mastercode1. Keep door open. Press and HOLD the Program button until the keypad Flashes green (about 5 seconds).2. Press Lock button once.3. Enter Mastercode.4. Press Lock button once.5. Re-enter Mastercode.6. Press Lock button once.If programming is unsuccessful, the keypad will flash red three times with three beeps. Make sure the Mastercode has been enabled before trying to disable it. Attempt the procedure again, making sure to enter the same Mastercode in steps 3 and 5.7. Make sure switch #3 is on, and press the Program button once. If you hear three beeps and see the keypad flash green three times, the Mastercode is disabled.Note: The lock will time out after five seconds. If you have a Kwikset lock, it is essential to know how to change the code for your home. This can be useful if the lock is broken or if you want to change the code for another reason. Changing the code on Kwikset locks is simple and only takes a few minutes.The Kwikset has too many different models, so the steps of changing the code on the Kwikset locks are slightly different. Now, lets introduce how to change the code on Kwikset locks according to other models.In general, to change the Kwikset lock user code:Prepare your Kwikset lock master code if you have enabled a programming code.Delete the Kwikset lock code you want to change.Add a new Kwikset lock user code.Change the Kwikset lock user code successfully.To know more about Kwikset lock problems and troubleshooting, please check this article: Kwikset Smart Lock Not Working. Expert Troubleshooting Guide.Change the code on Kwikset SmartCode 909.To change the Kwikset SmartCode 909, add a new user code to the same position. For example, if you want to change the third user code, add a different user code in position three.Without the master code Make sure the door is open. Press the Program button for the number of times corresponding to the programmed user code position.Enter user code. A total of 8 user codes may be programmed.Press the Lock button once. With the master code Keep the door open. Press the Program button once. The keypad will flash green, and you will hear three beeps.Enter Master codePress the Lock button oncePress the Program button for the number of times corresponding to the programmed user code position. Example: If programming the third code, press the button three timesIf you cannot remember the user code position, you may wish to perform a factory reset Kwikset lock to delete all codes associated with the lock.Enter new user code.Press the Lock button once.If you want to know how to change the code on Kwikset SmartCode 909, please check this article: How To Change Code On Kwikset SmartCode 909? Detail Guide.Change the master code on Kwikset SmartCode 910, 911, and 912 Keep the door open. Press and HOLD the Program button until the keypad flashes green (about 5 seconds).Enter new Master code.Press the Lock button once.Re-enter the Master code.Press the Lock button once.If programming is successful, the keypad will flash green once with one beep. If programming is unsuccessful, the keypad will flash red three times with three beeps. Please note:If you cannot remember the user code position, you may request a factory reset to delete all codes associated with the lock.If no button is pressed for five seconds, the system will time out and you must restart the procedure.For more help about Kwikset Smartcode Deadbolt locks, please check this article: Detailed Kwikset SmartCode Deadbolt Troubleshooting Guide.Change the code on Kwikset SmartCode 888, 913, and 914To change the user code on Kwikset SmartCode 888, 913, and 914, you must delete this user code first and then add a new user code.Delete a single user code with the master code: Keep the door open. Press the Program button once. The keypad will flash green, and you will hear three beeps.Press the Lock button once.Enter the Master code.Press the Lock button once.Enter the user code to be deleted.Press the Lock button once.Re-enter the user code to be deleted.Press the Lock button once.To learn more about changing the code on Kwikset Smartcode 913, please read this article: How To Change Code On Kwikset Smartcode 913? A Detail Guide.Also, if you have problems with the Kwikset SmartCode 913, this article will help you: Kwikset SmartCode 913 Programming and Troubleshooting Guide.Delete a single user code without the master code Keep the door open. Press the Program button once.Press the Lock button once.Re-enter the user code to be deleted.Press the Lock button once.Re-enter the user code.Press the Lock button once.If programming is successful, the keypad will flash green once with one beep.If programming is unsuccessful, the keypad will flash red three times with three beeps.Add User Codes with the Master code. Keep the door open. Press the Program button once. The keypad will flash green, and you will hear three beeps.Enter the Master code.Press the Lock button once.Press the Lock button once.Add User Codes without the Master code. Keep the door open. Press the Program button once. The keypad will flash green (about 5 seconds).Enter new Mastercode.6. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has been enabled before trying to disable it. Attempt the procedure again, making sure to enter the same Mastercode in step 4 and 6.8. Make sure switch #3 is on, and press the Program button once. If you hear three beeps andNote: The lock will time out after five seconds.Disabling and Deleting the Mastercode1. Keep door open. Press and HOLD the Program button until the Checkmark symbol illuminates (about 5 seconds).2. Press Checkmark symbol once.3. Enter new Mastercode.4. Press Lock button once.5. Re-enter Mastercode.6. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has been enabled before trying to disable it. Attempt the procedure again, making sure to enter the same Mastercode in step 4 and 6.8. Make sure switch #3 is on, and press the Program button once. If you hear three beeps and see the Checkmark flash five times, the Mastercode is enabled.Disabling and Deleting the Mastercode1. Keep door open. Press and HOLD the Program button until the Checkmark symbol illuminates (about 5 seconds).2. Press Checkmark symbol once.3. Press Lock symbol once.4. Enter Mastercode.5. Press Lock symbol once.If programming is successful, the Checkmark will illuminate and you will hear one beep. If programming is unsuccessful, the X pattern will flash three times, and you will hear three beeps. Make sure the Mastercode has been enabled before trying to disable it. Attempt the procedure again, making sure to enter the same Mastercode in step 4 and 6.8. Make sure switch #3 is on, and press the Program button once. If you don't immediately hear five beeps and see the Checkmark flash five times, the Mastercode is disabled. Read More Download Article Download Article A Kwikset lock is a convenient way to get in and out of your home without keys, but how do you manage the codes for yourself and your guests? Adding and deleting codes on Kwikset locks is a straightforward process you can learn in no time. In this article, well walk you through how to add new User Codes and delete them from traditional and touchscreen models, plus how to do a factory reset and program your own Mastercode. If you're ready to secure your door, keep scrolling! Add User Code: Press the program button the number of times that matches the code position you want to fill, enter the code, and press the lock button.Delete User Code: Press the program button the number of times that matches the old code position, enter a new code, and press the lock button.Delete User Code on touchscreen: Press the program, checkmark, and lock buttons. Enter the code twice. Press the lock button. You will hear one beep.4. Press 7.5. Press the lock button. You will hear one beep.6. Enter a new Mastercode. It must be between 4 and 10 digits.7. Press the lock button. You will hear two beeps if successful. If you hear three beeps, it was unsuccessful. Repeat from step 1 slowly. Read More Answer If you do not have the master or user code you may do a factory reset on the unit to program a new master code into the lock. The link provided will guide on how to factory reset the lock and program the lock. Click here. Read More Answer Enabling and Setting the MastercodeProgramming timeout: If no button is pressed for five seconds, the system will time out and you will need to restart the procedure.1. Keep door open. Press and HOLD the Program button until the keypad flashes green (about 5 seconds).2. Enter new Mastercode.3. Press Lock button once.4. Re-enter Mastercode.5. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has not already been programmed. Attempt the procedure again, making sure to enter the same Mastercode in step 2 and 4.6. Make sure switch #3 is on, and press the Program button once. If you hear three beeps andNote: The lock will time out after five seconds.Disabling and Deleting the Mastercode1. Keep door open. Press and HOLD the Program button until the Checkmark symbol illuminates (about 5 seconds).2. Press Checkmark symbol once.3. Enter Mastercode.4. Press Lock button once.5. Re-enter Mastercode.6. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has been enabled before trying to disable it. Attempt the procedure again, making sure to enter the same Mastercode in step 4 and 6.8. Make sure switch #3 is on, and press the Program button once. If you don't immediately hear five beeps and see the Checkmark flash five times, the Mastercode is disabled. Read More Download Article Download Article A Kwikset lock is a convenient way to get in and out of your home without keys, but how do you manage the codes for yourself and your guests? Adding and deleting codes on Kwikset locks is a straightforward process you can learn in no time. In this article, well walk you through how to add new User Codes and delete them from traditional and touchscreen models, plus how to do a factory reset and program your own Mastercode. If you're ready to secure your door, keep scrolling! Add User Code: Press the program button the number of times that matches the code position you want to fill, enter the code, and press the lock button.Delete User Code: Press the program button the number of times that matches the old code position, enter a new code, and press the lock button.Delete User Code on touchscreen: Press the program, checkmark, and lock buttons. Enter the code twice. Press the lock button. You will hear one beep.4. Press 7.5. Press the lock button. You will hear one beep.6. Enter a new Mastercode. It must be between 4 and 10 digits.7. Press the lock button. You will hear two beeps if successful. If you hear three beeps, it was unsuccessful. Repeat from step 1 slowly. Read More Answer If you do not have the master or user code you may do a factory reset on the unit to program a new master code into the lock. The link provided will guide on how to factory reset the lock and program the lock. Click here. Read More Answer Enabling and Setting the MastercodeProgramming timeout: If no button is pressed for five seconds, the system will time out and you will need to restart the procedure.1. Keep door open. Press and HOLD the Program button until the keypad flashes green (about 5 seconds).2. Enter new Mastercode.3. Press Lock button once.4. Re-enter Mastercode.5. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has not already been programmed. Attempt the procedure again, making sure to enter the same Mastercode in step 2 and 4.6. Make sure switch #3 is on, and press the Program button once. If you hear three beeps andNote: The lock will time out after five seconds.Disabling and Deleting the Mastercode1. Keep door open. Press and HOLD the Program button until the Checkmark symbol illuminates (about 5 seconds).2. Press Checkmark symbol once.3. Enter Mastercode.4. Press Lock button once.5. Re-enter Mastercode.6. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has been enabled before trying to disable it. Attempt the procedure again, making sure to enter the same Mastercode in step 4 and 6.8. Make sure switch #3 is on, and press the Program button once. If you don't immediately hear five beeps and see the Checkmark flash five times, the Mastercode is disabled. Read More Download Article Download Article A Kwikset lock is a convenient way to get in and out of your home without keys, but how do you manage the codes for yourself and your guests? Adding and deleting codes on Kwikset locks is a straightforward process you can learn in no time. In this article, well walk you through how to add new User Codes and delete them from traditional and touchscreen models, plus how to do a factory reset and program your own Mastercode. If you're ready to secure your door, keep scrolling! Add User Code: Press the program button the number of times that matches the code position you want to fill, enter the code, and press the lock button.Delete User Code: Press the program button the number of times that matches the old code position, enter a new code, and press the lock button.Delete User Code on touchscreen: Press the program, checkmark, and lock buttons. Enter the code twice. Press the lock button. You will hear one beep.4. Press 7.5. Press the lock button. You will hear one beep.6. Enter a new Mastercode. It must be between 4 and 10 digits.7. Press the lock button. You will hear two beeps if successful. If you hear three beeps, it was unsuccessful. Repeat from step 1 slowly. Read More Answer If you do not have the master or user code you may do a factory reset on the unit to program a new master code into the lock. The link provided will guide on how to factory reset the lock and program the lock. Click here. Read More Answer Enabling and Setting the MastercodeProgramming timeout: If no button is pressed for five seconds, the system will time out and you will need to restart the procedure.1. Keep door open. Press and HOLD the Program button until the keypad flashes green (about 5 seconds).2. Enter new Mastercode.3. Press Lock button once.4. Re-enter Mastercode.5. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has not already been programmed. Attempt the procedure again, making sure to enter the same Mastercode in step 2 and 4.6. Make sure switch #3 is on, and press the Program button once. If you hear three beeps andNote: The lock will time out after five seconds.Disabling and Deleting the Mastercode1. Keep door open. Press and HOLD the Program button until the Checkmark symbol illuminates (about 5 seconds).2. Press Checkmark symbol once.3. Enter Mastercode.4. Press Lock button once.5. Re-enter Mastercode.6. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has been enabled before trying to disable it. Attempt the procedure again, making sure to enter the same Mastercode in step 4 and 6.8. Make sure switch #3 is on, and press the Program button once. If you don't immediately hear five beeps and see the Checkmark flash five times, the Mastercode is disabled. Read More Download Article Download Article A Kwikset lock is a convenient way to get in and out of your home without keys, but how do you manage the codes for yourself and your guests? Adding and deleting codes on Kwikset locks is a straightforward process you can learn in no time. In this article, well walk you through how to add new User Codes and delete them from traditional and touchscreen models, plus how to do a factory reset and program your own Mastercode. If you're ready to secure your door, keep scrolling! Add User Code: Press the program button the number of times that matches the code position you want to fill, enter the code, and press the lock button.Delete User Code: Press the program button the number of times that matches the old code position, enter a new code, and press the lock button.Delete User Code on touchscreen: Press the program, checkmark, and lock buttons. Enter the code twice. Press the lock button. You will hear one beep.4. Press 7.5. Press the lock button. You will hear one beep.6. Enter a new Mastercode. It must be between 4 and 10 digits.7. Press the lock button. You will hear two beeps if successful. If you hear three beeps, it was unsuccessful. Repeat from step 1 slowly. Read More Answer If you do not have the master or user code you may do a factory reset on the unit to program a new master code into the lock. The link provided will guide on how to factory reset the lock and program the lock. Click here. Read More Answer Enabling and Setting the MastercodeProgramming timeout: If no button is pressed for five seconds, the system will time out and you will need to restart the procedure.1. Keep door open. Press and HOLD the Program button until the keypad flashes green (about 5 seconds).2. Enter new Mastercode.3. Press Lock button once.4. Re-enter Mastercode.5. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has not already been programmed. Attempt the procedure again, making sure to enter the same Mastercode in step 2 and 4.6. Make sure switch #3 is on, and press the Program button once. If you hear three beeps andNote: The lock will time out after five seconds.Disabling and Deleting the Mastercode1. Keep door open. Press and HOLD the Program button until the Checkmark symbol illuminates (about 5 seconds).2. Press Checkmark symbol once.3. Enter Mastercode.4. Press Lock button once.5. Re-enter Mastercode.6. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has been enabled before trying to disable it. Attempt the procedure again, making sure to enter the same Mastercode in step 4 and 6.8. Make sure switch #3 is on, and press the Program button once. If you don't immediately hear five beeps and see the Checkmark flash five times, the Mastercode is disabled. Read More Download Article Download Article A Kwikset lock is a convenient way to get in and out of your home without keys, but how do you manage the codes for yourself and your guests? Adding and deleting codes on Kwikset locks is a straightforward process you can learn in no time. In this article, well walk you through how to add new User Codes and delete them from traditional and touchscreen models, plus how to do a factory reset and program your own Mastercode. If you're ready to secure your door, keep scrolling! Add User Code: Press the program button the number of times that matches the code position you want to fill, enter the code, and press the lock button.Delete User Code: Press the program button the number of times that matches the old code position, enter a new code, and press the lock button.Delete User Code on touchscreen: Press the program, checkmark, and lock buttons. Enter the code twice. Press the lock button. You will hear one beep.4. Press 7.5. Press the lock button. You will hear one beep.6. Enter a new Mastercode. It must be between 4 and 10 digits.7. Press the lock button. You will hear two beeps if successful. If you hear three beeps, it was unsuccessful. Repeat from step 1 slowly. Read More Answer If you do not have the master or user code you may do a factory reset on the unit to program a new master code into the lock. The link provided will guide on how to factory reset the lock and program the lock. Click here. Read More Answer Enabling and Setting the MastercodeProgramming timeout: If no button is pressed for five seconds, the system will time out and you will need to restart the procedure.1. Keep door open. Press and HOLD the Program button until the keypad flashes green (about 5 seconds).2. Enter new Mastercode.3. Press Lock button once.4. Re-enter Mastercode.5. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has not already been programmed. Attempt the procedure again, making sure to enter the same Mastercode in step 2 and 4.6. Make sure switch #3 is on, and press the Program button once. If you hear three beeps andNote: The lock will time out after five seconds.Disabling and Deleting the Mastercode1. Keep door open. Press and HOLD the Program button until the Checkmark symbol illuminates (about 5 seconds).2. Press Checkmark symbol once.3. Enter Mastercode.4. Press Lock button once.5. Re-enter Mastercode.6. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has been enabled before trying to disable it. Attempt the procedure again, making sure to enter the same Mastercode in step 4 and 6.8. Make sure switch #3 is on, and press the Program button once. If you don't immediately hear five beeps and see the Checkmark flash five times, the Mastercode is disabled. Read More Download Article Download Article A Kwikset lock is a convenient way to get in and out of your home without keys, but how do you manage the codes for yourself and your guests? Adding and deleting codes on Kwikset locks is a straightforward process you can learn in no time. In this article, well walk you through how to add new User Codes and delete them from traditional and touchscreen models, plus how to do a factory reset and program your own Mastercode. If you're ready to secure your door, keep scrolling! Add User Code: Press the program button the number of times that matches the code position you want to fill, enter the code, and press the lock button.Delete User Code: Press the program button the number of times that matches the old code position, enter a new code, and press the lock button.Delete User Code on touchscreen: Press the program, checkmark, and lock buttons. Enter the code twice. Press the lock button. You will hear one beep.4. Press 7.5. Press the lock button. You will hear one beep.6. Enter a new Mastercode. It must be between 4 and 10 digits.7. Press the lock button. You will hear two beeps if successful. If you hear three beeps, it was unsuccessful. Repeat from step 1 slowly. Read More Answer If you do not have the master or user code you may do a factory reset on the unit to program a new master code into the lock. The link provided will guide on how to factory reset the lock and program the lock. Click here. Read More Answer Enabling and Setting the MastercodeProgramming timeout: If no button is pressed for five seconds, the system will time out and you will need to restart the procedure.1. Keep door open. Press and HOLD the Program button until the keypad flashes green (about 5 seconds).2. Enter new Mastercode.3. Press Lock button once.4. Re-enter Mastercode.5. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has not already been programmed. Attempt the procedure again, making sure to enter the same Mastercode in step 2 and 4.6. Make sure switch #3 is on, and press the Program button once. If you hear three beeps andNote: The lock will time out after five seconds.Disabling and Deleting the Mastercode1. Keep door open. Press and HOLD the Program button until the Checkmark symbol illuminates (about 5 seconds).2. Press Checkmark symbol once.3. Enter Mastercode.4. Press Lock button once.5. Re-enter Mastercode.6. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has been enabled before trying to disable it. Attempt the procedure again, making sure to enter the same Mastercode in step 4 and 6.8. Make sure switch #3 is on, and press the Program button once. If you don't immediately hear five beeps and see the Checkmark flash five times, the Mastercode is disabled. Read More Download Article Download Article A Kwikset lock is a convenient way to get in and out of your home without keys, but how do you manage the codes for yourself and your guests? Adding and deleting codes on Kwikset locks is a straightforward process you can learn in no time. In this article, well walk you through how to add new User Codes and delete them from traditional and touchscreen models, plus how to do a factory reset and program your own Mastercode. If you're ready to secure your door, keep scrolling! Add User Code: Press the program button the number of times that matches the code position you want to fill, enter the code, and press the lock button.Delete User Code: Press the program button the number of times that matches the old code position, enter a new code, and press the lock button.Delete User Code on touchscreen: Press the program, checkmark, and lock buttons. Enter the code twice. Press the lock button. You will hear one beep.4. Press 7.5. Press the lock button. You will hear one beep.6. Enter a new Mastercode. It must be between 4 and 10 digits.7. Press the lock button. You will hear two beeps if successful. If you hear three beeps, it was unsuccessful. Repeat from step 1 slowly. Read More Answer If you do not have the master or user code you may do a factory reset on the unit to program a new master code into the lock. The link provided will guide on how to factory reset the lock and program the lock. Click here. Read More Answer Enabling and Setting the MastercodeProgramming timeout: If no button is pressed for five seconds, the system will time out and you will need to restart the procedure.1. Keep door open. Press and HOLD the Program button until the keypad flashes green (about 5 seconds).2. Enter new Mastercode.3. Press Lock button once.4. Re-enter Mastercode.5. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has not already been programmed. Attempt the procedure again, making sure to enter the same Mastercode in step 2 and 4.6. Make sure switch #3 is on, and press the Program button once. If you hear three beeps andNote: The lock will time out after five seconds.Disabling and Deleting the Mastercode1. Keep door open. Press and HOLD the Program button until the Checkmark symbol illuminates (about 5 seconds).2. Press Checkmark symbol once.3. Enter Mastercode.4. Press Lock button once.5. Re-enter Mastercode.6. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has been enabled before trying to disable it. Attempt the procedure again, making sure to enter the same Mastercode in step 4 and 6.8. Make sure switch #3 is on, and press the Program button once. If you don't immediately hear five beeps and see the Checkmark flash five times, the Mastercode is disabled. Read More Download Article Download Article A Kwikset lock is a convenient way to get in and out of your home without keys, but how do you manage the codes for yourself and your guests? Adding and deleting codes on Kwikset locks is a straightforward process you can learn in no time. In this article, well walk you through how to add new User Codes and delete them from traditional and touchscreen models, plus how to do a factory reset and program your own Mastercode. If you're ready to secure your door, keep scrolling! Add User Code: Press the program button the number of times that matches the code position you want to fill, enter the code, and press the lock button.Delete User Code: Press the program button the number of times that matches the old code position, enter a new code, and press the lock button.Delete User Code on touchscreen: Press the program, checkmark, and lock buttons. Enter the code twice. Press the lock button. You will hear one beep.4. Press 7.5. Press the lock button. You will hear one beep.6. Enter a new Mastercode. It must be between 4 and 10 digits.7. Press the lock button. You will hear two beeps if successful. If you hear three beeps, it was unsuccessful. Repeat from step 1 slowly. Read More Answer If you do not have the master or user code you may do a factory reset on the unit to program a new master code into the lock. The link provided will guide on how to factory reset the lock and program the lock. Click here. Read More Answer Enabling and Setting the MastercodeProgramming timeout: If no button is pressed for five seconds, the system will time out and you will need to restart the procedure.1. Keep door open. Press and HOLD the Program button until the keypad flashes green (about 5 seconds).2. Enter new Mastercode.3. Press Lock button once.4. Re-enter Mastercode.5. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has not already been programmed. Attempt the procedure again, making sure to enter the same Mastercode in step 2 and 4.6. Make sure switch #3 is on, and press the Program button once. If you hear three beeps andNote: The lock will time out after five seconds.Disabling and Deleting the Mastercode1. Keep door open. Press and HOLD the Program button until the Checkmark symbol illuminates (about 5 seconds).2. Press Checkmark symbol once.3. Enter Mastercode.4. Press Lock button once.5. Re-enter Mastercode.6. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has been enabled before trying to disable it. Attempt the procedure again, making sure to enter the same Mastercode in step 4 and 6.8. Make sure switch #3 is on, and press the Program button once. If you don't immediately hear five beeps and see the Checkmark flash five times, the Mastercode is disabled. Read More Download Article Download Article A Kwikset lock is a convenient way to get in and out of your home without keys, but how do you manage the codes for yourself and your guests? Adding and deleting codes on Kwikset locks is a straightforward process you can learn in no time. In this article, well walk you through how to add new User Codes and delete them from traditional and touchscreen models, plus how to do a factory reset and program your own Mastercode. If you're ready to secure your door, keep scrolling! Add User Code: Press the program button the number of times that matches the code position you want to fill, enter the code, and press the lock button.Delete User Code: Press the program button the number of times that matches the old code position, enter a new code, and press the lock button.Delete User Code on touchscreen: Press the program, checkmark, and lock buttons. Enter the code twice. Press the lock button. You will hear one beep.4. Press 7.5. Press the lock button. You will hear one beep.6. Enter a new Mastercode. It must be between 4 and 10 digits.7. Press the lock button. You will hear two beeps if successful. If you hear three beeps, it was unsuccessful. Repeat from step 1 slowly. Read More Answer If you do not have the master or user code you may do a factory reset on the unit to program a new master code into the lock. The link provided will guide on how to factory reset the lock and program the lock. Click here. Read More Answer Enabling and Setting the MastercodeProgramming timeout: If no button is pressed for five seconds, the system will time out and you will need to restart the procedure.1. Keep door open. Press and HOLD the Program button until the keypad flashes green (about 5 seconds).2. Enter new Mastercode.3. Press Lock button once.4. Re-enter Mastercode.5. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has not already been programmed. Attempt the procedure again, making sure to enter the same Mastercode in step 2 and 4.6. Make sure switch #3 is on, and press the Program button once. If you hear three beeps andNote: The lock will time out after five seconds.Disabling and Deleting the Mastercode1. Keep door open. Press and HOLD the Program button until the Checkmark symbol illuminates (about 5 seconds).2. Press Checkmark symbol once.3. Enter Mastercode.4. Press Lock button once.5. Re-enter Mastercode.6. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has been enabled before trying to disable it. Attempt the procedure again, making sure to enter the same Mastercode in step 4 and 6.8. Make sure switch #3 is on, and press the Program button once. If you don't immediately hear five beeps and see the Checkmark flash five times, the Mastercode is disabled. Read More Download Article Download Article A Kwikset lock is a convenient way to get in and out of your home without keys, but how do you manage the codes for yourself and your guests? Adding and deleting codes on Kwikset locks is a straightforward process you can learn in no time. In this article, well walk you through how to add new User Codes and delete them from traditional and touchscreen models, plus how to do a factory reset and program your own Mastercode. If you're ready to secure your door, keep scrolling! Add User Code: Press the program button the number of times that matches the code position you want to fill, enter the code, and press the lock button.Delete User Code: Press the program button the number of times that matches the old code position, enter a new code, and press the lock button.Delete User Code on touchscreen: Press the program, checkmark, and lock buttons. Enter the code twice. Press the lock button. You will hear one beep.4. Press 7.5. Press the lock button. You will hear one beep.6. Enter a new Mastercode. It must be between 4 and 10 digits.7. Press the lock button. You will hear two beeps if successful. If you hear three beeps, it was unsuccessful. Repeat from step 1 slowly. Read More Answer If you do not have the master or user code you may do a factory reset on the unit to program a new master code into the lock. The link provided will guide on how to factory reset the lock and program the lock. Click here. Read More Answer Enabling and Setting the MastercodeProgramming timeout: If no button is pressed for five seconds, the system will time out and you will need to restart the procedure.1. Keep door open. Press and HOLD the Program button until the keypad flashes green (about 5 seconds).2. Enter new Mastercode.3. Press Lock button once.4. Re-enter Mastercode.5. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has not already been programmed. Attempt the procedure again, making sure to enter the same Mastercode in step 2 and 4.6. Make sure switch #3 is on, and press the Program button once. If you hear three beeps andNote: The lock will time out after five seconds.Disabling and Deleting the Mastercode1. Keep door open. Press and HOLD the Program button until the Checkmark symbol illuminates (about 5 seconds).2. Press Checkmark symbol once.3. Enter Mastercode.4. Press Lock button once.5. Re-enter Mastercode.6. Press Lock button once.If programming is successful, the keypad will flash red three times with three beeps. Make sure the Mastercode has been enabled before trying to disable it. Attempt the procedure again, making sure to enter the same Mastercode in step 4 and 6.8. Make sure switch #3 is on, and press the Program button once. If you don't immediately hear five beeps and see the Checkmark flash five times, the Mastercode is disabled. Read More Download Article Download Article A Kwikset lock is a convenient way to get in and out of your home without keys, but how do you manage the codes for yourself and your guests? Adding and deleting codes on Kwikset locks is a straightforward process you can learn in no time. In this article, well walk you through how to add new User Codes and delete them from traditional and touchscreen models, plus how to do a factory reset and program your own Mastercode. If you're ready to secure your door, keep scrolling! Add User Code: Press the program button the number of times that matches the code position you want to fill, enter the code, and press the lock button.Delete User Code: Press the program button the number of times that matches the old code position, enter a new code, and press the lock button.Delete User Code on touchscreen: Press the program, checkmark, and lock buttons. Enter the code twice. Press the lock button. You will hear one beep.4. Press 7.5. Press the lock button. You will hear one beep.6. Enter a new Mastercode. It must be between 4 and 10 digits.7. Press the lock button. You will hear two beeps