

Continue



























Trouble codes · OBD II Trouble Codes Full list of OBD II Diagnostic Trouble codes for your vehicle. If your Check engine light is on you may have a serious problem. Scan your codes and follow the chart to determine what the code means. Some shops will scan your codes for free. Autozone is one place that will give you the code number. FULL LIST OF OBD II CODES 1996-AM NEWER P0016 - Crankshaft Position Camshaft Position Correlation Bank 1 Sensor A P0030 - Heated Oxygen Sensor (HO2S) Heater Circuit Bank 1 Sensor 1 P0031 - Heated Oxygen Sensor (HO2S) Heater Circuit Low Voltage Bank 1 Sensor 1 P0032 - Heated Oxygen Sensor (HO2S) Heater Circuit High Voltage Bank 1 Sensor 1 P0036 - Heated Oxygen Sensor (HO2S) Heater Control Circuit Bank 1 Sensor 2 P0037 - Heated Oxygen Sensor (HO2S) Heater Circuit Low Voltage Bank 1 Sensor 2 P0052 - Heated Oxygen Sensor (HO2S) Heater Circuit High Voltage Bank 2 Sensor 1 P0053 - HO2S Heater Resistance Bank 1 Sensor 1 (PCM) P0054 - HO2S Heater Resistance Bank 1 Sensor 2 (PCM) P0056 - Heated Oxygen Sensor (HO2S) Heater Circuit Bank 2 Sensor 2 P0057 - Heated Oxygen Sensor (HO2S) Heater Circuit Low Voltage Bank 2 Sensor 2 P0058 - Heated Oxygen Sensor (HO2S) Heater Circuit High Voltage Bank 2 Sensor 2 P0068 - Throttle Body Airflow Performance (PCM) P0100 - MAP Sensor Circuit Insufficient Activity P0101 - Mass Air Flow (MAF) Sensor Performance P0102 - Mass Air Flow (MAF) Sensor Circuit Low Voltage P0103 - Mass Air Flow (MAF) Sensor Circuit High Frequency P0104 - Mass Air Flow Circuit Intermittent P0105 - MAP Sensor Circuit Insufficient Activity P0106 - Manifold Absolute Pressure (MAP) System Performance P0107 - Manifold Absolute Pressure (MAP) Sensor Circuit Low Voltage P0108 - Manifold Absolute Pressure (MAP) Sensor Circuit High Voltage P0109 - Manifold Absolute Pressure Circuit Intermittent P0110 - Intake Air Temperature (IAT) Sensor Circuit P0111 - Intake Air Temperature (IAT) Sensor Performance P0112 - Intake Air Temperature (IAT) Sensor Circuit Low Voltage P0113 - Intake Air Temperature (IAT) Sensor Circuit High Voltage P0114 - Intake Air Temperature Circuit Intermittent P0115 - Engine Coolant Temperature (ECT) Sensor Circuit Performance P0116 - Engine Coolant Temperature (ECT) Sensor Performance P0118 - Engine Coolant Temperature (ECT) Sensor Circuit High Voltage P0119 - Engine Coolant Temperature (ECT) Sensor Circuit Low Voltage P0120 - TP System Performance P0121 - TP Sensor Circuit Insufficient Activity P0122 - Throttle Position (TP) Sensor Circuit Low Voltage P0123 - Throttle Position (TP) Sensor Circuit High Voltage P0124 - Throttle Position Sensor 1 Circuit Intermittent P0125 - Engine Coolant Temperature (ECT) Insufficient for Closed Loop Fuel Control P0126 - Insufficient ECT for Stable Operation P0128 - Coolant Thermostat Below Thermostat Regulating Temperature P0130 - Heated Oxygen Sensor (HO2S) Circuit Closed Loop (CL) Performance Bank 1 Sensor 1 P0131 - Heated Oxygen Sensor (HO2S) Circuit Low Voltage Bank 1 Sensor 1 P0132 - Heated Oxygen Sensor (HO2S) Circuit High Voltage Bank 1 Sensor 1 P0133 - Heated Oxygen Sensor (HO2S) Slow Response Bank 1 Sensor 1 P0134 - Heated Oxygen Sensor (HO2S) Circuit Insufficient Activity Bank 1 Sensor 1 P0135 - Heated Oxygen Sensor (HO2S) Heater Performance Bank 1 Sensor 1 P0136 - Heated Oxygen Sensor (HO2S) Circuit Bank 1 Sensor 1 P0137 - Heated Oxygen Sensor (HO2S) Circuit Low Voltage Bank 1 Sensor 2 P0138 - Heated Oxygen Sensor (HO2S) Circuit High Voltage Bank 1 Sensor 2 P0139 - Heated Oxygen Sensor (HO2S) Slow Response Bank 1 Sensor 2 P0140 - Heated Oxygen Sensor (HO2S) Circuit Insufficient Activity Bank 1 Sensor 2 P0141 - Heated Oxygen Sensor (HO2S) Heater Performance Bank 1 Sensor 2 P0142 - Heated Oxygen Sensor (HO2S) Circuit Bank 1 Sensor 3 P0143 - Heated Oxygen Sensor (HO2S) Circuit High Voltage Bank 1 Sensor 3 P0144 - Heated Oxygen Sensor (HO2S) Circuit High Voltage Bank 1 Sensor 3 P0145 - Heated Oxygen Sensor (HO2S) Circuit Bank 1 Sensor 2 Slow Response P0146 - Heated Oxygen Sensor (HO2S) Circuit Insufficient Activity Bank 1 Sensor 3 P0147 - Heated Oxygen Sensor (HO2S) Heater Performance Bank 1 Sensor 3 P0150 - Heated Oxygen Sensor (HO2S) Circuit Closed Loop (CL) Performance Bank 2 Sensor 1 P0151 - Heated Oxygen Sensor (HO2S) Circuit Low Voltage Bank 2 Sensor 1 P0152 - Heated Oxygen Sensor (HO2S) Circuit High Voltage Bank 2 Sensor 1 P0153 - Heated Oxygen Sensor (HO2S) Slow Response Bank 2 Sensor 1 P0154 - Heated Oxygen Sensor (HO2S) Heater Performance Bank 2 Sensor 1 P0156 - Heated Oxygen Sensor (HO2S) Circuit Bank 2 Sensor 2 P0157 - Heated Oxygen Sensor (HO2S) Circuit Low Voltage Bank 2 Sensor 2 P0158 - Heated Oxygen Sensor (HO2S) Circuit High Voltage Bank 2 Sensor 2 P0159 - Heated Oxygen Sensor (HO2S) Slow Response Bank 2 Sensor 2 P0160 - Heated Oxygen Sensor (HO2S) Circuit Insufficient Activity Bank 2 Sensor 2 P0161 - Heated Oxygen Sensor (HO2S) Heater Performance Bank 2 Sensor 2 P0162 - Heated Oxygen Sensor (HO2S) Circuit Bank 2 Sensor 3 Low Voltage P0164 - Heated Oxygen Sensor (HO2S) Circuit Bank 2 Sensor 3 High Voltage P0165 - Heated Oxygen Sensor (HO2S) Circuit Bank 2 Sensor 3 Slow Response P0166 - Heated Oxygen Sensor (HO2S) Circuit Bank 2 Sensor 3 No Activity Detected P0167 - Heated Oxygen Sensor (HO2S) Heater Circuit Bank 2 Sensor 3 P0169 - Fuel Composition Sensor Circuit Low Voltage P0170 - Fuel Trim Bank 1 P0171 - Fuel Trim System Lean Bank 1 P0172 - Fuel Trim System Rich Bank 1 P0173 - Fuel Trim Bank 2 P0174 - Fuel Trim System Lean Bank 2 P0175 - Fuel Trim System Rich Bank 2 P0176 - Fuel Composition Sensor Circuit P0177 - Fuel Composition Sensor Circuit Performance P0178 - Fuel Composition Sensor Circuit Low Voltage P0179 - Fuel Composition Sensor Circuit High Voltage P0180 - Fuel Temperature Sensor 1 Circuit P0181 - Fuel Temp. Sensor 1 Circuit Performance P0182 - Fuel Temperature Sensor Circuit Low Voltage P0183 - Fuel Temperature Sensor Circuit High Voltage P0184 - Fuel Temperature Sensor 1 Circuit Intermittent P0185 - Fuel Temperature Sensor 2 Circuit P0186 - Fuel Temp. Sensor 2 Circuit Performance P0187 - Fuel Temperature Sensor 2 Circuit Low Voltage P0188 - Fuel Temperature Sensor 2 Circuit High Voltage P0189 - Fuel Temperature Sensor 2 Circuit Intermittent P0190 - Fuel Rail Pressure Sensor Circuit Intermittent P0191 - Fuel Rail Pressure Sensor Circuit Low Voltage P0192 - Fuel Rail Pressure Sensor Circuit High Voltage P0194 - Fuel Rail Pressure Sensor Circuit Intermittent P0195 - Engine Oil Temperature Sensor P0196 - Engine Oil Temperature Sensor P0197 - Engine Oil Temperature Sensor Low Voltage P0198 - Engine Oil Temperature Sensor Intermittent P0200 - Injector 1 Control Circuit P0202 - Injector 2 Control Circuit P0203 - Injector 3 Control Circuit P0204 - Injector 4 Control Circuit P0205 - Injector 5 Control Circuit P0206 - Injector 6 Control Circuit P0207 - Injector 7 Control Circuit P0208 - Injector 8 Control Circuit P0209 - Injector 9 Control Circuit P0210 - Injector 10 Control Circuit P0211 - Injector 11 Control Circuit P0212 - Injector 12 Control Circuit P0213 - Cold Start Injector 1 P0214 - Cold Start Injector 2 P0215 - Engine Shutoff Control Circuit P0216 - Injection Timing Control Circuit P0217 - Engine Overtemp Condition P0218 - Transmission Fluid Overtemperature P0219 - Engine Overspeed Condition P0220 - APP Sensor 2 Circuit P0221 - APP (Throttle Position) Sensor 2 Circuit Performance P0222 - APP (Throttle Position) Sensor 2 Circuit Low Voltage P0223 - APP (Throttle Position) Sensor 2 Circuit High Voltage P0224 - Throttle Position Sensor 2 Intermittent P0225 - APP Sensor 3 Circuit P0226 - APP Sensor 3 Circuit Performance P0227 - APP Sensor 3 Circuit Low Voltage P0228 - APP Sensor 3 Circuit High Voltage P0229 - Throttle Position Sensor 3 Intermittent P0230 - Fuel Pump Relay Control Circuit P0231 - Fuel Pump Feedback Circuit Low Voltage P0232 - Fuel Pump Feedback Circuit High Voltage P0233 - Fuel Pump Secondary Circuit Intermittent P0234 - Turbocharger Engine Overboost Condition P0235 - Turbocharger Boost Sensor 1 Circuit P0236 - Turbocharger Boost Position Sensor 1 Circuit P0237 - Turbocharger Boost Sensor 1 Circuit Low Voltage P0238 - Turbocharger Boost Sensor 1 Circuit High Voltage P0239 - Turbocharger Boost Sensor 2 Performance P0240 - Turbocharger Boost Sensor 2 Circuit Low Voltage P0242 - Turbocharger Boost Sensor 2 Circuit High Voltage P0243 - Turbocharger Boost Sensor 2 Circuit High Voltage P0244 - Turbocharger Boost Sensor 2 Circuit Intermittent P0245 - Turbocharger Boost Sensor 2 Circuit Low Voltage P0246 - Turbocharger Boost Sensor 2 Circuit High Voltage P0247 - Turbocharger Boost Sensor 2 Circuit Intermittent P0248 - Turbocharger Boost Sensor 2 Circuit High Voltage P0249 - Turbocharger Boost Sensor 2 Circuit Low Voltage P0250 - Turbocharger Wastegate Solenoid - High Voltage P0251 - Injection Pump Fuel Metering Control "A" Malfunction (Cam/Rotor/Injector) P0252 - Injection Pump Fuel Metering Control "A" Range/Performance (Cam/Rotor/Injector) P0253 - Injection Pump Fuel Metering Control Low (Cam/Rotor/Injector) P0254 - Injection Pump Fuel Metering Control High (Cam/Rotor/Injector) P0255 - Injection Pump Fuel Metering Control "B" High (Cam/Rotor/Injector) P0256 - Injection Pump Fuel Metering Control "A" Intermittent (Cam/Rotor/Injector) P0256 - Injection Pump Fuel Metering Control "B" Malfunction (Cam/Rotor/Injector) P0257 - Injection Pump Fuel Metering Control "B" Range/Performance (Cam/Rotor/Injector) P0258 - Injection Pump Fuel Metering Control "B" Low (Cam/Rotor/Injector) P0259 - Injection Pump Fuel Metering Control "B" High (Cam/Rotor/Injector) P0260 - Injection Pump Fuel Metering Control "B" Intermittent (Cam/Rotor/Injector) P0261 - Cylinder 1 Injector Circuit Low P0262 - Cylinder 1 Injector Circuit High P0263 - Cylinder 1 Contribution/Balance Fault P0264 - Cylinder 2 Injector Circuit Low P0265 - Cylinder 2 Injector Circuit High P0266 - Cylinder 2 Contribution/Balance Fault P0267 - Cylinder 3 Injector Circuit Low P0268 - Cylinder 3 Injector Circuit High P0269 - Cylinder 3 Contribution/Balance Fault P0270 - Cylinder 4 Injector Circuit Low P0271 - Cylinder 4 Injector Circuit High P0272 - Cylinder 4 Contribution/Balance Fault P0273 - Cylinder 5 Injector Circuit Low P0274 - Cylinder 5 Injector Circuit High P0275 - Cylinder 5 Contribution/Balance Fault P0276 - Cylinder 6 Injector Circuit Low P0277 - Cylinder 6 Injector Circuit High P0278 - Cylinder 6 Contribution/Balance Fault P0279 - Cylinder 7 Injector Circuit Low P0281 - Cylinder 7 Contribution/Balance Fault P0282 - Cylinder 8 Injector Circuit Low P0283 - Cylinder 8 Injector Circuit High P0284 - Cylinder 8 Contribution/Balance Fault P0285 - Cylinder 9 Injector Circuit Low P0286 - Cylinder 9 Injector Circuit High P0287 - Cylinder 9 Contribution/Balance Fault P0288 - Cylinder 10 Injector Circuit Low P0289 - Cylinder 10 Injector Circuit High P0290 - Cylinder 10 Contribution/Balance Fault P0291 - Cylinder 11 Injector Circuit Low P0292 - Cylinder 11 Injector Circuit High P0293 - Cylinder 11 Contribution/Balance Fault P0294 - Cylinder 12 Injector Circuit Low P0295 - Cylinder 12 Injector Circuit High P0296 - Cylinder 12 Contribution/Balance Fault P0300 - Engine Misfire Detected P0301 - Cylinder 1 Misfire Detected P0302 - Cylinder 2 Misfire Detected P0303 - Cylinder 3 Misfire Detected P0304 - Cylinder 4 Misfire Detected P0305 - Cylinder 5 Misfire Detected P0306 - Cylinder 6 Misfire Detected P0307 - Cylinder 7 Misfire Detected P0308 - Cylinder 8 Misfire Detected P0309 - Cylinder 9 Misfire Detected P0310 - Cylinder 10 Misfire Detected P0311 - Cylinder 11 Misfire Detected P0312 - Cylinder 12 Misfire Detected P0313 - Misfire Detected With Low Fuel Level P0315 - Crankshaft position (CKP) system variation values are not stored in the PCM memory P0318 - Road Knock Sensor Circuit P0320 - Ignition/Distributor Engine Speed Input Circuit Malfunction P0321 - Ignition/Distributor Engine Speed Input Circuit Range/Performance P0322 - IC Module 4X Reference Circuit No Frequency P0323 - Ignition/Distributor Engine Speed Input Circuit Intermittent P0324 - Knock Sensor (KS) Module Performance P0325 - PCM Knock Sensor Circuit P0326 - Knock Sensor Circuit Excessive Spark Retard P0327 - Knock Sensor Circuit Low Voltage P0328 - Knock Sensor 1 Circuit High Input (Bank 1 or Single Sensor) P0329 - Knock Sensor 1 Circuit Intermittent (Bank 1 or Single Sensor) P0330 - Knock Sensor (KS) Circuit Bank 2 P0331 - Knock Sensor 2 Circuit Range/Performance (Bank 2) P0332 - Knock Sensor 2 Circuit Low Input (Bank 2) P0333 - Knock Sensor 2 Circuit High Input (Bank 2) P0334 - Knock Sensor 2 Circuit Intermittent (Bank 2) P0335 - CKP Sensor A Circuit Performance P0336 - Crankshaft Position (CKP) Sensor A Performance P0337 - Crankshaft Position (CKP) Sensor A Circuit Low Duty Cycle P0338 - Crankshaft Position (CKP) Sensor A Circuit Intermittent P0340 - Camshaft Position (CMP) Sensor Circuit P0341 - Camshaft Position (CMP) Sensor Circuit P0341 - Camshaft Position (CMP) Sensor Performance P0342 - Camshaft Position Sensor Circuit Low Input P0343 - Camshaft Position Sensor Circuit High Input P0344 - Camshaft Position Sensor Circuit Intermittent P0350 - Ignition Coil 1 Primary/Secondary Circuit Malfunction P0360 - Ignition Coil 1 Primary/Secondary Circuit Malfunction P0361 - Ignition Coil 1 Primary/Secondary Circuit Malfunction P0362 - Ignition Coil 1 Primary/Secondary Circuit Malfunction P0363 - Ignition Coil 1 Primary/Secondary Circuit Malfunction P0370 - Timing Reference High Resolution Signal A Malfunction P0371 - IC 24X Reference Circuit Too Many Pulses P0372 - IC 24X Reference Circuit Missing Pulses P0373 - Timing Reference High Resolution Signal A Intermittent/Erratic Pulses P0374 - Timing Reference High Resolution Signal A No Pulses P0375 - Timing Reference High Resolution Signal B Malfunction P0376 - Timing Reference High Resolution Signal B Malfunction P0377 - Timing Reference High Resolution Signal B Too Few Pulses P0378 - Timing Reference High Resolution Signal B Intermittent/Erratic Pulses P0379 - Timing Reference High Resolution Signal B No Pulses P0380 - Glow Plug/Heater Circuit "A" Malfunction P0381 - Glow Plug/Heater Indicator Circuit Malfunction P0382 - Exhaust Gas Recirculation Fluid Malfunction P0385 - Crankshaft Position (CKP) Sensor B Circuit P0386 - Crankshaft Position (CKP) Sensor B Performance P0387 - Crankshaft Position Sensor B Circuit Low Input P0388 - Crankshaft Position Sensor B Circuit High Input P0389 - Crankshaft Position Sensor B Circuit Intermittent P0400 - Exhaust Gas Recirculation (EGR) Flow Insufficient P0402 - Exhaust Gas Recirculation (EGR) Flow Excessive P0403 - Exhaust Gas Recirculation (EGR) Solenoid Control Circuit P0404 - Exhaust Gas Recirculation (EGR) Solenoid Control Circuit P0405 - Exhaust Gas Recirculation (EGR) Solenoid Control Circuit P0406 - Exhaust Gas Recirculation (EGR) Solenoid Control Circuit P0407 - Exhaust Gas Recirculation (EGR) Solenoid Control Circuit P0408 - Exhaust Gas Recirculation (EGR) Solenoid Control Circuit P0409 - Exhaust Gas Recirculation (EGR) Solenoid Control Circuit P0410 - Secondary Air Injection (AIR) System P0411 - Secondary Air Injection (AIR) Solenoid Relay Control Circuit Bank 1 P0413 - Secondary Air Injection (AIR) Pump Relay Control Circuit Bank 1 P0419 - Secondary Air Injection (AIR) Pump Relay Control Circuit Bank 2 P0420 - Catalyst System Low Efficiency P0421 - Warm Up Catalyst Efficiency Below Threshold (Bank 1) P0422 - Catalyst System Low Efficiency Bank 1 P0423 - Heated Catalyst Efficiency Below Threshold (Bank 1) P0424 - Heated Catalyst Temperature Below Threshold (Bank 1) P0430 - Catalyst System Low Efficiency Bank 2 P0431 - Warm Up Catalyst Efficiency Below Threshold (Bank 2) P0432 - Catalyst System Low Efficiency Bank 2 P0433 - Heated Catalyst Efficiency Below Threshold (Bank 2) P0434 - Heated Catalyst Temperature Below Threshold (Bank 2) P0440 - Evaporative Emission (EVAP) System P0441 - Evaporative Emission Control System Incorrect Purge Flow P0442 - Evaporative Emission (EVAP) System Small Leak Detected P0443 - EVAP Purge Solenoid Valve 1 Control Circuit P0444 - Evaporative Emission Control System Purge Control Valve Circuit Open P0445 - Evaporative Emission Control System Purge Control Valve Circuit Shorted P0446 - EVAP Vent Solenoid Valve Control System P0447 - Evaporative Emission Control System Vent Control Circuit Open P0448 - Evaporative Emission Control System Vent Control Circuit Shorted P0449 - Evaporative Emission (EVAP) Vent Solenoid Control Circuit P0450 - Fuel Tank Pressure Sensor Circuit P0451 - Evaporative Emission Control System Pressure Sensor Range/Performance P0452 - Fuel Tank Pressure Sensor Circuit Low Voltage P0453 - Fuel Tank Pressure Sensor Circuit High Voltage P0454 - Evaporative Emission Control System Pressure Sensor Intermittent P0455 - Evaporative Emission (EVAP) System Leak Detected P0460 - Fuel Level Sensor Circuit P0461 - Fuel Level Sensor Performance P0462 - Fuel Level Sensor Circuit Low Voltage P0463 - Fuel Level Sensor Circuit High Voltage P0464 - Fuel Level Sensor Circuit Intermittent P0465 - Purge Flow Sensor Circuit Malfunction P0466 - Purge Flow Sensor Circuit Range/Performance P0467 - Purge Flow Sensor Circuit Low Voltage P0468 - Purge Flow Sensor Circuit High Voltage P0469 - Purge Flow Sensor Circuit Intermittent P0470 - Exhaust Pressure Control Valve Malfunction P0471 - Exhaust Pressure Control Valve Range/Performance P0472 - Exhaust Pressure Control Valve Intermittent P0473 - Exhaust Pressure Control Valve Intermittent P0475 - Exhaust Pressure Control Valve Malfunction P0476 - Exhaust Pressure Control Valve Range/Performance P0477 - Exhaust Pressure Control Valve Low P0478 - Exhaust Pressure Control Valve High P0479 - Exhaust Pressure Control Valve Low Intermittent P0480 - Cooling Fan Relay 1 Control Circuit P0481 - Cooling Fan Relay 2 Control Circuit P0482 - Cooling Fan 3 Control Circuit Malfunction P0483 - Cooling Fan Rationality Check Malfunction P0484 - Cooling Fan Circuit Over Current P0485 - Cooling Fan Power/Ground Circuit Malfunction P0496 - Evaporative Emission (EVAP) System Flow During Non-Purge P0500 - Vehicle Speed Sensor (VSS) Circuit P0501 - Vehicle Speed Sensor Range/Performance P0502 - Vehicle Speed Sensor (VSS) Circuit Low Input P0503 - Vehicle Speed Sensor (VSS) Circuit Intermittent P0505 - Idle Control System Malfunction P0506 - Idle Speed Low P0507 - Idle Speed High P0510 - Closed Throttle Position Switch Malfunction P0512 - Start Switch Circuit P0520 - Engine Oil Pressure Sensor/Switch Circuit Malfunction P0521 - Engine Oil Pressure Sensor/Switch Circuit Range/Performance P0522 - Engine Oil Pressure Sensor/Switch Circuit Low Voltage P0523 - Engine Oil Pressure Sensor/Switch Circuit High Voltage P0526 - Cooling Fan Speed Sensor Circuit P0530 - A/C Refrigerant Pressure Sensor Circuit Range/Performance P0532 - Air Conditioning (A/C) Refrigerant Pressure Sensor Circuit Low Voltage P0533 - Air Conditioning (A/C) Refrigerant Pressure Sensor Circuit High Voltage P0534 - Air Conditioner Refrigerant Charge Loss P0530 - Power Steering Pressure (PSP) Switch Circuit P0551 - Power Steering Pressure Sensor Circuit Range/Performance P0552 - Power Steering Pressure Sensor Circuit Low Input P0553 - Power Steering Pressure Sensor Circuit High Input P0554 - Power Steering Pressure Sensor Circuit Intermittent P0566 - System Voltage Unstable P0652 - System Voltage High (TCM) P0564 - System Voltage Low (TCM) P0565 - System Voltage Intermittent P0566 - System Voltage High (TCM) P0566 - System Voltage Low (TCM) P0567 - System Voltage Intermittent P0600 - Transmission Control Module (TCM) Malfunction P0601 - Transmission Control Module (TCM) Malfunction P0602 - Transmission Control Module (TCM) Malfunction P0603 - Transmission Control Module (TCM) Malfunction P0604 - Transmission Control Module (TCM) Malfunction P0605 - Transmission Control Module (TCM) Malfunction P0606 - Transmission Control Module (TCM) Malfunction P0607 - Transmission Control Module (TCM) Malfunction P0608 - Transmission Control Module (TCM) Malfunction P0609 - Transmission Control Module (TCM) Malfunction P0610 - Transmission Control Module (TCM) Malfunction P0611 - Transmission Control Module (TCM) Malfunction P0612 - Transmission Control Module (TCM) Malfunction P0613 - Transmission Control Module (TCM) Malfunction P0614 - Transmission Control Module (TCM) Malfunction P0615 - Transmission Control Module (TCM) Malfunction P0616 - Transmission Control Module (TCM) Malfunction P0617 - Transmission Control Module (TCM) Malfunction P0618 - Transmission Control Module (TCM) Malfunction P0619 - Transmission Control Module (TCM) Malfunction P0620 - Transmission Control Module (TCM) Malfunction P0621 - Transmission Control Module (TCM) Malfunction P0622 - Transmission Control Module (TCM) Malfunction P0623 - Transmission Control Module (TCM) Malfunction P0624 - Transmission Control Module (TCM) Malfunction P0625 - Transmission Control Module (TCM) Malfunction P0626 - Transmission Control Module (TCM) Malfunction P0627 - Transmission Control Module (TCM) Malfunction P0628 - Transmission Control Module (TCM) Malfunction P0629 - Transmission Control Module (TCM) Malfunction P0630 - Transmission Control Module (TCM) Malfunction P0631 - Transmission Control Module (TCM) Malfunction P0632 - Transmission Control Module (TCM) Malfunction P0633 - Transmission Control Module (TCM) Malfunction P0634 - Transmission Control Module (TCM) Malfunction P0635 - Transmission Control Module (TCM) Malfunction P0636 - Transmission Control Module (TCM) Malfunction P0637 - Transmission Control Module (TCM) Malfunction P0638 - Transmission Control Module (TCM) Malfunction P0639 - Transmission Control Module (TCM) Malfunction P0640 - Transmission Control Module (TCM) Malfunction P0641 - Transmission Control Module (TCM) Malfunction P0642 - Transmission Control Module (TCM) Malfunction P0643 - Transmission Control Module (TCM) Malfunction P0644 - Transmission Control Module (TCM) Malfunction P0645 - Transmission Control Module (TCM) Malfunction P0646 - Transmission Control Module (TCM) Malfunction P0647 - Transmission Control Module (TCM) Malfunction P0648 - Transmission Control Module (TCM) Malfunction P0649 - Transmission Control Module (TCM) Malfunction P0650 - Transmission Control Module (TCM) Malfunction P0651 - Transmission Control Module (TCM) Malfunction P0652 - Transmission Control Module (TCM) Malfunction P0653 - Transmission Control Module (TCM) Malfunction P0654 - Transmission Control Module (TCM) Malfunction P0655 - Transmission Control Module (TCM) Malfunction P0656 - Transmission Control Module (TCM) Malfunction P0657 - Transmission Control Module (TCM) Malfunction P0658 - Transmission Control Module (TCM) Malfunction P0659 - Transmission Control Module (TCM) Malfunction P0660 - Transmission Control Module (TCM) Malfunction P0661 - Transmission Control Module (TCM) Malfunction P0662 - Transmission Control Module (TCM) Malfunction P0663 - Transmission Control Module (TCM) Malfunction P0664 - Transmission Control Module (TCM) Malfunction P0665 - Transmission Control Module (TCM) Malfunction P0666 - Transmission Control Module (TCM) Malfunction P0667 - Transmission Control Module (TCM) Malfunction P0668 - Transmission Control Module (TCM) Malfunction P0669 - Transmission Control Module (TCM) Malfunction P0670 - Transmission Control Module (TCM) Malfunction P0671 - Transmission Control Module (TCM) Malfunction P0672 - Transmission Control Module (TCM) Malfunction P0673 - Transmission Control Module (TCM) Malfunction P0674 - Transmission Control Module (TCM) Malfunction P0675 - Transmission Control Module (TCM) Malfunction P0676 - Transmission Control Module (TCM) Malfunction P0677 - Transmission Control Module (TCM) Malfunction P0678 - Transmission Control Module (TCM) Malfunction P0679 - Transmission Control Module (TCM) Malfunction P0680 - Transmission Control Module (TCM) Malfunction P0681 - Transmission Control Module (TCM) Malfunction P0682 - Transmission Control Module (TCM) Malfunction P0683 - Transmission Control Module (TCM) Malfunction P0684 - Transmission Control Module (TCM) Malfunction P0685 - Transmission Control Module (TCM) Malfunction P0686 - Transmission Control Module (TCM) Malfunction P0687 - Transmission Control Module (TCM) Malfunction P0688 - Transmission Control Module (TCM) Malfunction P0689 - Transmission Control Module (TCM) Malfunction P0690 - Transmission Control Module (TCM) Malfunction P0691 - Transmission Control Module (TCM) Malfunction P0692 - Transmission Control Module (TCM) Malfunction P0693 - Transmission Control Module (TCM) Malfunction P0694 - Transmission Control Module (TCM) Malfunction P0695 - Transmission Control Module (TCM) Malfunction P0696 - Transmission Control Module (TCM) Malfunction P0697 - Transmission Control Module (TCM) Malfunction P0698 - Transmission Control Module (TCM) Malfunction P0699 - Transmission Control Module (TCM) Malfunction P0700 - Transmission Control Module (TCM) Malfunction P0701 - Transmission Control Module (TCM) Malfunction P0702 - Transmission Control Module (TCM) Malfunction P0703 - Transmission Control Module (TCM) Malfunction P0704 - Clutch Switch Input Circuit Malfunction P0705 - Trans Range Switch Circuit P0706 - Trans Range Switch Performance P0707 - Transmission Range Sensor Circuit Low Input P0708 - Transmission Range Sensor Circuit High Input P0709 - Transmission Range Sensor Circuit Intermittent P0710 - Transmission Fluid Temperature Sensor Circuit Malfunction P0711 - TFT Sensor Circuit Range/Performance P0712 - Transmission Fluid Temperature (TFT) Sensor Circuit Low Input P0713 - Transmission Fluid Temperature (TFT) Sensor Circuit High Input P0714 - Transmission Fluid Temperature Sensor Circuit Intermittent P0715 - Input/Turbine Speed Sensor Circuit Malfunction P0716 - Input Speed Sensor Circuit Intermittent P0717 - Input Speed Sensor Circuit Low Input P0718 - Input/Turbine Speed Sensor Circuit Intermittent P0719 - Brake Switch Circuit Low Input P0720 - Output Speed Sensor Circuit Malfunction P0721 - Output Speed Sensor Range/Performance P0722 - Output Speed Sensor Circuit Low Input P0723 - Output Speed Sensor Circuit High Input P0724 - Brake Switch Circuit High Input P0725 - Engine Speed Input Circuit P0726 - Engine Speed Input Circuit Range/Performance P0727 - Engine Speed Input Circuit No Signal P0728 - Engine Speed Input Circuit Intermittent P0730 - Incorrect 1st Gear Ratio P0731 - Incorrect 1st Gear Ratio P0732 - Incorrect 2nd Gear Ratio P0733 - Incorrect 2nd Gear Ratio P0734 - Incorrect 3rd Gear Ratio P0735 - Incorrect 3rd Gear Ratio P0736 - Incorrect 4th Gear Ratio P0737 - Incorrect 4th Gear Ratio P0738 - Incorrect 5th Gear Ratio P0739 - Incorrect 5th Gear Ratio P0740 - Torque Converter Clutch Malfunction P0741 - Torque Converter Clutch Malfunction P0742 - Torque Converter Clutch Malfunction P0743 - Torque Converter Clutch Malfunction P0744 - Torque Converter Clutch Malfunction P0745 - Torque Converter Clutch Malfunction P0746 - Torque Converter Clutch Malfunction P0747 - Torque Converter Clutch Malfunction P0748 - Torque Converter Clutch Malfunction P0749 - Torque Converter Clutch Malfunction P0750 - Torque Converter Clutch Malfunction P0751 - Torque Converter Clutch Malfunction P0752 - 1-2 Shift Solenoid Valve Performance - No Second or Third Gear P0753 - 1-2 Shift Solenoid Electrical P0754 - Shift Solenoid A Intermittent P0755 - Shift Solenoid B Malfunction P0756 - 2-3 Shift Solenoid Valve Performance - No First or Second Gear P0757 - 2-3 Shift Solenoid Valve Performance - No Third or Fourth Gear P0758 - 2-3 Shift Solenoid Electrical P0759 - Shift Solenoid B Intermittent P0760 - Shift Solenoid C Malfunction P0761 - Shift Solenoid C Performance or Stuck Off P0762 - Shift Solenoid C Stuck On P0763 - Shift Solenoid C Electrical P0764 - Shift Solenoid C Intermittent P0765 - Shift Solenoid D Malfunction P0766 - Shift Solenoid D Performance or Stuck Off P0767 - Shift Solenoid D Stuck On P0768 - Shift Solenoid D Electrical P0769 - Shift Solenoid D Intermittent P0770 - Shift Solenoid E Malfunction P0771 - Shift Solenoid E Performance or Stuck Off P0772 - Shift Solenoid E Stuck On P0773 - Shift Solenoid E Electrical P0774 - Shift Solenoid E Intermittent P0780 - Shift Malfunction P0781 - 1-2 Shift Malfunction P0782 - 2-3 Shift Malfunction P0783 - 3-4 Shift Malfunction P0784 - 4-5 Shift Malfunction P0785 - 3-2 Shift Solenoid Circuit Electrical P0786 - Shift/Timing Solenoid Range/Performance P0787 - Shift/Timing Solenoid High P0788 - Shift/Timing Solenoid High P0789 - Shift/Timing Solenoid Intermittent P0790 - Normal/Performance Switch Circuit Malfunction P0801 - Reverse Inhibit Control Circuit Malfunction P0803 - 1-4 Upshift (Skip Shift) Solenoid Control Circuit Malfunction P0804 - 1-4 Upshift (Skip Shift) Lamp Control Circuit Malfunction P0805 - Park/Neutral Position (PNP) Switch Circuit P0806 - Powertrain Indicated Traction Control Malfunction P0894 - Transmission Control Module (TCM) Malfunction P0895 - Transmission Control Module (TCM) Malfunction P0896 - Transmission Control Module (TCM) Malfunction P0897 - Transmission Control Module (TCM) Malfunction P0898 - Transmission Control Module (TCM) Malfunction P0899 - Transmission Control Module (TCM) Malfunction P0900 - Transmission Control Module (TCM) Malfunction P0901 - Transmission Control Module (TCM) Malfunction P0902 - Transmission Control Module (TCM) Malfunction P0903 - Transmission Control Module (TCM) Malfunction P0904 - Transmission Control Module (TCM) Malfunction P0905 - Transmission Control Module (TCM) Malfunction P0906 - Transmission Control Module (TCM) Malfunction P0907 - Transmission Control Module (TCM) Malfunction P0908 - Transmission Control Module (TCM) Malfunction P0909 - Transmission Control Module (TCM) Malfunction P0910 - Transmission Control Module (TCM) Malfunction P0911 - Transmission Control Module (TCM) Malfunction P0912 - Transmission Control Module (TCM) Malfunction P0913 - Transmission Control Module (TCM) Malfunction P0914 - Transmission Control Module (TCM) Malfunction P0915 - Transmission Control Module (TCM) Malfunction P0916 - Transmission Control Module (TCM) Malfunction P0917 - Transmission Control Module (TCM) Malfunction P0918 - Transmission Control Module (TCM) Malfunction P0919 - Transmission Control Module (TCM) Malfunction P0920 - Transmission Control Module (TCM) Malfunction P0921 - Transmission Control Module (TCM) Malfunction P0922 - Transmission Control Module (TCM) Malfunction P0923 - Transmission Control Module (TCM) Malfunction P0924 - Transmission Control Module (TCM) Malfunction P0925 - Transmission Control Module (TCM) Malfunction P0926 - Transmission Control Module (TCM) Malfunction P0927 - Transmission Control Module (TCM) Malfunction P0928 - Transmission Control Module (TCM) Malfunction P0929 - Transmission Control Module (TCM) Malfunction P0930 - Transmission Control Module (TCM) Malfunction P0931 - Transmission Control Module (TCM) Malfunction P0932 - Transmission Control Module (TCM) Malfunction P0933 - Transmission Control Module (TCM) Malfunction P0934 - Transmission Control Module (TCM) Malfunction P0935 - Transmission Control Module (TCM) Malfunction P0936 - Transmission Control Module (TCM) Malfunction P0937 - Transmission Control Module (TCM) Malfunction P0938 - Transmission Control Module (TCM) Malfunction P0939 - Transmission Control Module (TCM) Malfunction P0940 - Transmission Control Module (TCM) Malfunction P0941 - Transmission Control Module (TCM) Malfunction P0942 - Transmission Control Module (TCM) Malfunction P0943 - Transmission Control Module (TCM) Malfunction P0944 - Transmission Control Module (TCM) Malfunction P0945 - Transmission Control Module (TCM) Malfunction P0946 - Transmission Control Module (TCM) Malfunction P0947 - Transmission Control Module (TCM) Malfunction P0948 - Transmission Control Module (TCM) Malfunction P0949 - Transmission Control Module (TCM) Malfunction P0950 - Transmission Control Module (TCM) Malfunction P0951 - Transmission Control Module (TCM) Malfunction P0952 - Transmission Control Module (TCM) Malfunction P0953 - Transmission Control Module (TCM) Malfunction P0954 - Transmission Control Module (TCM) Malfunction P0955 - Transmission Control Module (TCM) Malfunction P0956 - Transmission Control Module (TCM) Malfunction P0957 - Transmission Control Module (TCM) Malfunction P0958 - Transmission Control Module (TCM) Malfunction P0959 - Transmission Control Module (TCM) Malfunction P0960 - Transmission Control Module (TCM) Malfunction P0961 - Transmission Control Module (TCM) Malfunction P0962 - Transmission Control Module (TCM) Malfunction P0963 - Transmission Control Module (TCM) Malfunction P0964 - Transmission Control Module (TCM) Malfunction P0965 - Transmission Control Module (TCM) Malfunction P0966 - Transmission Control Module (TCM) Malfunction P0967 - Transmission Control Module (TCM) Malfunction P0968 - Transmission Control Module (TCM) Malfunction P0969 - Transmission Control Module (TCM) Malfunction P0970 - Transmission Control Module (TCM) Malfunction P0971 - Shift Pressure Control (PC) Solenoid Control Circuit High Voltage (TCM) P0972 - Shift Pressure Control (PC) Solenoid Control Circuit Low Voltage (TCM) P0973 - PCM detects an open or short to ground in the 1-2 SS valve circuit P0974 - PCM detects a continuous short to voltage in the 1-2 SS valve circuit P0976 - PCM detects a continuous open or short to ground in the 2-3 SS valve circuit P0977 - PCM detects a continuous short to voltage in the 2-3 SS valve circuit P0979 - Shift Solenoid (SS) 3 Control Circuit Low Voltage (TCM) P0980 - Shift Solenoid (SS) 3 Control Circuit High Voltage (TCM) P0982 - Shift Solenoid (SS) 4 Control Circuit High Voltage (TCM) P0983 - Shift Solenoid (SS) 4 Control Circuit High Voltage (TCM) P0985 - Shift Solenoid (SS) 5 Control Circuit Low Voltage (TCM) P0986 - Shift Solenoid (SS) 5 Control Circuit High Voltage (TCM) P1031 - Heated Oxygen Sensor (HO2S) Heater Current Monitor Control Circuit Banks 1 and 2 Sensor 1 P1032 - Heated Oxygen Sensor (HO2S) Heater Warm Up Control Circuit Banks 1 and 2 Sensor 1 P1101 - Actual measured airflow from MAF, MAP, EGR, and TP is not within range of the calculated airflow P1105 - Secondary Vacuum Sensor Circuit P1106 - Manifold Absolute Pressure (MAP) Sensor Circuit Intermittent High Voltage P1107 - Manifold Absolute Pressure (MAP) Sensor Circuit Intermittent Low Voltage P1108 - BARO to MAP Sensor Comparison Too High P1109 - Secondary Port Throttle System P1111 - Intake Air Temperature (IAT) Sensor Circuit Intermittent High Voltage P1112 - Intake Air Temperature (IAT) Sensor Circuit Intermittent Low Voltage P1113 - Intake Resonance Switchover Solenoid Control Circuit P1114 - Engine Coolant Temperature (ECT) Sensor Circuit Intermittent Low Voltage P1115 - Engine Coolant Temperature (ECT) Sensor Circuit Intermittent High Voltage P1116 - ECT Signal Unstable or Intermittent P1117 - Engine Coolant Temp. Signal Out-Of-Range Low P1118 - Engine Coolant Temp. Signal Out-Of-Range High P1119 - Engine Coolant Temperature (ECT) Sensor Circuit Intermittent P1120 - Throttle Position Sensor 1 Circuit P1121 - Throttle Position Sensor 1 Circuit Performance P1122 - Throttle Position Sensor 1 Circuit Low Voltage P1123 - Throttle Position Sensor 1 Circuit High Voltage P1124 - Throttle Position Sensor 1 Circuit Intermittent P1125 - Throttle Position Sensor 1 Circuit Low Voltage P1126 - Throttle Position Sensor 1 Circuit High Voltage P1127 - Throttle Position Sensor 1 Circuit Intermittent P1128 - Throttle Position Sensor 1 Circuit Low Voltage P1129 - Throttle Position Sensor 1 Circuit High Voltage P1130 - Throttle Position Sensor 1 Circuit Intermittent P1131 - Electronic Throttle Control (ETC) System Variation Values are Not Stored in the PCM Memory P1132 - Electronic Throttle Control (ETC) System Variation Values are Not Stored in the PCM Memory P1133 - Heated Oxygen Sensor (HO2S) Low Variance Bank 1 Sensor 1 P1134 - Heated Oxygen Sensor (HO2S) Low Variance Bank 2 Sensor 1 P1135 - Heated Oxygen Sensor (HO2S) Insufficient Switching Bank 1 Sensor 1 P1136 - Heated Oxygen Sensor (HO2S) Transition Time Ratio Bank 1 Sensor 1 P1135 - Heated Oxygen Sensor (HO2S) Lean Mean Bank 1 Sensor 1 P1136 - Heated Oxygen Sensor (HO2S) Rich Mean Bank 1 Sensor 1 P1137 - Heated Oxygen Sensor (HO2S) Lean System or Low Voltage P1138 - Heated Oxygen Sensor (HO2S) Bank 1 Sensor 2 Rich or High Voltage P1139 - Heated Oxygen Sensor (HO2S) Insuff. Switching Bank 1 Sensor 2 P1140 - Heated Oxygen Sensor (HO2S) Transition Time Ratio Bank 1 Sensor 2 P1141 - Heated Oxygen Sensor (HO2S) Bank 1 Sensor 2 Lean System or Low Voltage P1144 - Heated Oxygen Sensor (HO2S) Bank 1 Sensor 3 Rich or High Voltage P1145 - Heated Oxygen Sensor (HO2S) Cross Counts Bank 1 Sensor 3 P1153 - Heated Oxygen Sensor (HO2S) Insufficient Switching Bank 2 Sensor 1 P1154 - Heated Oxygen Sensor (HO2S) Transition Time Ratio Bank 2 Sensor 1 P1155 - Heated Oxygen Sensor (HO2S) Lean Mean Bank 2 Sensor 1 P1156 - Heated Oxygen Sensor (HO2S) Rich Mean Bank 2 Sensor 1 P1157 - Heated Oxygen Sensor (HO2S) Bank 2 Sensor 2 Lean System or Low Voltage P1158 - Heated Oxygen Sensor (HO2S) Bank 2 Sensor 2 Rich or High Voltage P1159 - Heated Oxygen Sensor (HO2S) Cross Counts Bank 2 Sensor 2 P1161 - Heated Oxygen Sensor (HO2S) Heater Control Circuit Bank 2 Sensor 2 P1163 - Heated Oxygen Sensor (HO2S) Bank 2 Sensor 3 Lean System or Low Voltage P1164 - Heated Oxygen Sensor (HO2S) Bank 2 Sensor 3 Rich or High Voltage P1165 - Heated Oxygen Sensor (HO2S) Cross Counts Bank 2 Sensor 3 P1166 - Bank to Bank Fuel Trim Offset P1171 - Fuel System Lean During Acceleration P1172 - Fuel Transfer Pump Fuel Insufficient P1185 - Fuel System Lean During Deceleration P1186 - Fuel System Rich During Deceleration P1187 - Fuel System Lean During Acceleration P1188 - Fuel System Rich During Acceleration P1189 - Fuel System Lean During Deceleration P1190 - Fuel System Rich During Deceleration P1191 - Fuel System Lean During Acceleration P1192 - Fuel System Rich During Acceleration P1193 - Fuel System Lean During Deceleration P1194 - Fuel System Rich During Deceleration P1195 - Fuel System Lean During Acceleration P1196 - Fuel System Rich During Acceleration P1197 - Fuel System Lean During Deceleration P1198 - Fuel System Rich During Deceleration P1199 - Fuel System Lean During Acceleration P1200 - Fuel System Rich During Acceleration P1201 - Fuel System Lean During Deceleration P1202 - Fuel System Rich During Deceleration P1203 - Fuel System Lean During Acceleration P1204 - Fuel System Rich During Acceleration P1205 - Fuel System Lean During Deceleration P1206 - Fuel System Rich During Deceleration P1207 - Fuel System Lean During Acceleration P1208 - Fuel System Rich During Acceleration P1209 - Fuel System Lean During Deceleration P1210 - Fuel System Rich During Deceleration P1211 - Fuel System Lean During Acceleration P1212 - Fuel System Rich During Acceleration P1213 - Fuel System Lean During Deceleration P1214 - Fuel System Rich During Deceleration P1215 - Ground Fault Detection Indicated P1216 - Fuel Solenoid Response Time Too Short P1217 - Fuel Solenoid Response Time Too Long P1218 - Injection Pump Calibration Circuit P1219 - Throttle Position Sensor Reference Voltage P1220 - Throttle Position (TP) Sensor 2 Circuit P1221 - Fuel Pump Secondary Circuit Low P1222 - Injector Control Circuit Intermittent P1225 - Injector Circuit Cylinder 2 Intermittent P1228 - Injector Circuit Cylinder 3 Intermittent P1231 - Injector Circuit Cylinder 4 Intermittent P1234 - Injector Circuit Cylinder 5 Intermittent P1237 - Injector Circuit Cylinder 6 Intermittent P1240 - Injector Circuit Cylinder 7 Intermittent P1243 - Injector Circuit Cylinder 8 Intermittent P1245 - Intake Plenum Switchover Valve P1250 - Early Fuel Evaporation Heater Circuit P1257 - Supercharger System Overboost P1258 - Engine Coolant Overtemperature - above 268°F - Protection Mode Active P1260 - Last Test Failed Failed SCX ENTER.More Info. P1270 - Accelerator Pedal Position Sensor A/D Converter Error P1271 - Accelerator Pedal Position (APP) Sensor 1-2 Correlation P1272 - Accelerator Pedal Position Sensor 1 P1273 - Accelerator Pedal Position (APP) Sensor 1 P1274 - Injectors Wired Incorrectly P1275 - Accelerator Pedal Position (APP) Sensor 1 Circuit P1276 - Accelerator Pedal Position (APP) Sensor 1 Circuit Performance P1277 - Accelerator Pedal Position Sensor 1 Circuit Low Voltage P1278 - Accelerator Pedal Position Sensor 1 Circuit High Voltage P1280 - Accelerator Pedal Position (APP) Sensor 2 Circuit P1281 - Accelerator Pedal Position Sensor 2 Circuit Performance P1282 - Accelerator Pedal Position Sensor 2 Circuit Low Voltage P1283 - Accelerator Pedal Position Sensor 2 Circuit High Voltage P1285 - Accelerator Pedal Position Sensor 3 Circuit P1286 - Accelerator Pedal Position Sensor 3 Circuit Performance P1287 - Accelerator Pedal Position (APP) Sensor 3 Circuit P1288 - Accelerator Pedal Position (APP) Sensor 3 Circuit Performance P1289 - Accelerator Pedal Position (APP) Sensor 3 Circuit Low Voltage P1290 - Accelerator Pedal Position (APP) Sensor 3 Circuit High Voltage P1291 - Accelerator Pedal Position (APP) Sensor 3 Circuit Intermittent P1292 - Accelerator Pedal Position (APP) Sensor 3 Circuit Low Voltage P1293 - Accelerator Pedal Position (APP) Sensor 3 Circuit High Voltage P1294 - Accelerator Pedal Position (APP) Sensor 3 Circuit Intermittent P1295 - Accelerator Pedal Position (APP) Sensor 3 Circuit Low Voltage P1296 - Accelerator Pedal Position (APP) Sensor 3 Circuit High Voltage P1297 - Accelerator Pedal Position (APP) Sensor 3 Circuit Intermittent P1298 - Accelerator Pedal Position (APP) Sensor 3 Circuit Low Voltage P1299 - Accelerator Pedal Position (APP) Sensor 3 Circuit High Voltage P1300 - Accelerator Pedal Position (APP) Sensor 3 Circuit Intermittent P1301 - Accelerator Pedal Position (APP) Sensor 3 Circuit Low Voltage P1302 - Accelerator Pedal Position (APP) Sensor 3 Circuit High Voltage P1303 - Accelerator Pedal Position (APP) Sensor 3 Circuit Intermittent P1304 - Accelerator Pedal Position (APP) Sensor 3 Circuit Low Voltage P1305 - Accelerator Pedal Position (APP) Sensor 3 Circuit High







